

DETERMINING THE HEIGHT FOR YOUR PEDESTAL PURCHASE



- Measure your current pedestal from the floor of your boat to the top of the pedestal.
- If you have an adjustable height pedestal, measure your pedestal from the floor of your boat to the top of the pedestal at the adjusted height you're most comfortable.

To assure you have the correct spider assembly, check the following measurements.

- Measure the outside diameter of the top of your current pedestal. It should read 2 7/8" (Figure 1)
- Measure the inside diameter of your current spider assembly. It should read 2 7/8" (Figure 2)

Figure 1



Figure 2



AirWave Pedestal Measurements

9" AirWave Pedestal	With Spider is	10-1/4"	To Bottom of Seat
10" AirWave Pedestal	With Spider is	11-1/4"	To Bottom of Seat
11" AirWave Pedestal	With Spider is	12-1/4"	To Bottom of Seat
9" AirWave Pedestal	With Spider & Slide is	10-7/8"	To Bottom of Seat
10" AirWave Pedestal	With Spider & Slide is	11-7/8"	To Bottom of Seat
11" AirWave Pedestal	With Spider & Slide is	12-7/8"	To Bottom of Seat